

---

## How to Install – KP202

---

1. JIO SIM card will not work with this printer.
2. For initial activation, sim card with internet is required.
3. Insert the SIM in your mobile.
4. Scan QR code (Paytm, PhonePe etc.) and make sure you receive the SMS on your mobile.
5. Once payment SMS is received on your mobile, take out the sim card from mobile.
6. Now unplug the charger/adaptor from the mains & switch off the printer.
7. Insert the same sim card that you took out from mobile (in step5) inside the printer & switch on the printer.
8. Check the printer LEDs as below to ensure that printer is working properly:
  1. The Power indicator LED is blinking
  2. Paper roll sensor indicator LED is off.
9. Wait for the network indicator LED to stop blinking and to glow continuously.
10. The printer will configure automatically by connecting to our servers.
11. It will give self-test page after successful configuration.
12. Now the printer is ready to use.



---

## LEDs Description – KP202

---

1. Left most LED is Power indicator
2. 2<sup>nd</sup> LED is Server Connection indicator
3. 3<sup>rd</sup> LED is Network Indicator
4. 4<sup>th</sup> LED is Paper roll sensor

### Power Indicator (1<sup>st</sup> LED):

1. Green: The printer is in normal working mode. (Default)
2. No light: The printer is Off.

### Server Connection Indicator (2<sup>nd</sup> LED):

1. Green – Blinking: The printer is trying to Connect to KUPIS-Server
2. Green – Steady: The printer is connected to KUPIS-Server
3. Off – No data connection. (Default)

### Network Indicator (3<sup>rd</sup> LED):

1. Blinks & goes off after switch on: Network signal is Good (Default)
2. Blinking continuously: No network, change the sim card.

### Paper roll sensor (4<sup>th</sup> LED):

1. Continuous red light with beep sound: No paper roll or sensor damage.
2. Off: The printer is in normal working mode. (Default)

